 


PX42シリーズ ディップスイッチ設定 DIP SWITCH



■ AGC MODE

SW1	ON	AGC HI
SW1	OFF	AGC LOW

■ AGC

SW2	ON	AGC OFF
SW2	OFF	AGC ON

■ γ特性 GAMMA

SW3	ON	γ = 1
SW3	OFF	γ = 0.45

■ 逆光補正モード BACKLIGHT COMPENSATION MODE

SW4	OFF	OFF	全面	WHOLE
SW4	OFF	ON	下方	LOWER
SW4	ON	OFF	中央	CENTER
SW4	ON	ON	下方+中央	LOWER+CENTER

■ 固定シャッター時 FIXED SHUTTER

SW6	ON	ON	ON	EIA : 1/100 CCIR : 1/120
ON	ON	OFF	OFF	1/250
ON	OFF	ON	ON	1/500
ON	OFF	OFF	OFF	1/1000
OFF	ON	ON	ON	1/2000
OFF	ON	OFF	OFF	1/5000
OFF	OFF	ON	ON	1/10000
OFF	OFF	OFF	OFF	1/100000

SW9	SW10	電子アイリス	ELECTRONIC IRIS
OFF	OFF	電子アイリス EIA : 1/100~1/100,000 CCIR : 1/120~1/100,000	ELECTRONIC IRIS EIA : 1/100~1/100,000 CCIR : 1/120~1/100,000
ON	OFF	シャッター	SHUTTER
ON	ON	EIA : 1/60固定 CCIR : 1/50固定	EIA : 1/60 FIXD CCIR : 1/50 FIXD

※ AUTO GAIN CONTROL機能を使用する場合は、SW2をOFF (AGC ON) にしてから使用します。
AGC HI機能は、通常の感度以上の明るさを必要とする時に使用します。
WHEN USING AGC FUNCTION, SW2 SHOULD BE "OFF".
THE AGC FUNCTION ADJUSTS THE LEVEL OF BRIGHTNESS AUTOMATICALLY.